


Thank you for choosing our Plug and Grow Tent. This is a high quality and safe product which is designed especially for horticulture industry. It will offer you ultimate control over your plants environment and results in strong and healthy plants with increased yield.

Scope of delivery

After opening the box, lay down all components out on the floor to identify them. Every frame tube is marked with a sticker A, B, C or D.

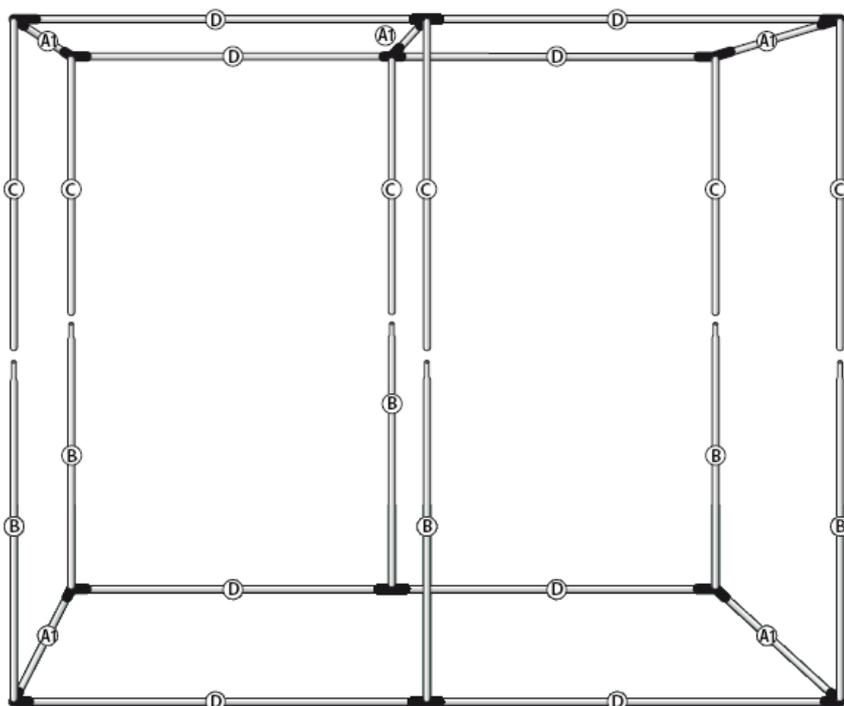

Components	Quantity
Tube-A	8
Tube-B	6
Tube-C	6
Tube-D	5
Corner Clamps	8
3-way bracket	2
4-way bracket	2
Roof Bar-deep	2
Roof Bar-shallow	2
Tent Shell	1
Waterproof tray	1
Hanging Straps	6

Assembling your Plug and Grow Tent

Make up the floor frame

Required parts: 4x Tube-A, 2x Tube-D, 4x Corner Clamps, 2x 3-way Bracket

First make up the square frame that is used for the bottom of the Grow Tent.



The black plastic cap on the corner brackets must face down. The tubes and corner clamps have a click system. Ensure that the tubes are fully located in the brackets, so that the buttons pop into place. The buttons should point inwards of the Grow Tent to avoid accidentally opening of the connection or damaging of the tent shell.



Insert the lower half of the uprights *Required parts: 6x Tube-B*

Insert the upright tube-B into the brackets. Tube-B has a smaller „male-end” which must be pointing upwards. Ensure that the tubes are fully located in the brackets so the buttons pop into place. The buttons should point inwards again.



Insert the lower frame into the Tent Shell *Required parts: 1x Tent Shell*

Open the tent shell to its full size. Undo the long zip of the front door all the way, but leave the small side doors closed. Ensure that the tent shell is the right way up. The mesh-covered ventilation holes should be at the bottom.



Carefully lift the lower frame into the bottom of the Grow Tent. Starting with one corner, fully locate the frame in the tent shell and go on with the next corners. Pull the tent shell with great care tight around each corner. Complete all four corners for a snug fit.




Construct the upper frame

Required parts: 4x Tube-A, 3x Tube-D, 4x Corner Clamps, 2x 4-way Bracket, 6x Tube-C


Make up a square frame in the same way you did for the bottom of the Grow Tent. Additionally this Grow Tent has a cross-member in the upper frame. Fully locate the poles into the brackets, remembering to point the buttons inwards as before. Insert the upright tube-C into the brackets and complete the top half of the frame. Position the upper half of the frame over the lower half. Check that all tubes are fully located.



Use each time one tube-A, tube-D and corner clamp to make an “L-shape”. Then add one upright tube-C into the corner clamp. Fully locate the poles in the brackets and remember to point the buttons inwards as before. Repeat building this corner. Fit each upper corner onto the lower frame by locating the tube-C onto a corner tube-B and position roughly to make the shape of the ceiling square.

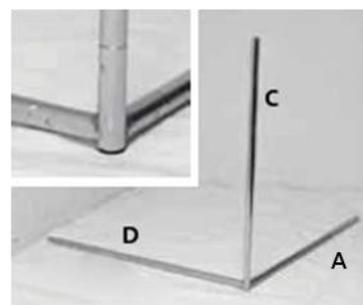

Fit the two remaining tube-C directly onto the centre tube-B. Complete the frame by using 2x 4-way bracket. Fit the complete ceiling cross-member between the two 4-way brackets with the tube-D. Check that all tubes are fully located.

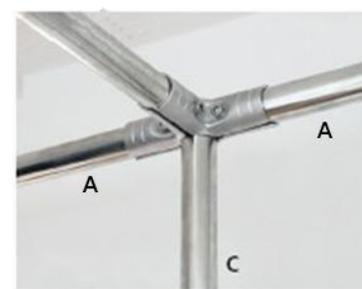

Stretch over the Tent Shell

Start carefully with one corner of the tent shell and pull it over the top of the frame. Go on with the next corners in the same way.



Make sure that the tent shell has a snug fit at the bottom and the top. Then wrap the tent shell around the frame. Close both zips slowly and aim to complete their closure at about half way up the doorway.



Install the roof bars *Required parts: 2x Roof Bar-deep, 2x Roof Bar-Shallow*

Each Grow Tent is supplied with both deep and shallow roof bars. Various configurations are possible as your requirements. For example the deep roof bars can support items such as ventilation systems and the shallow roof bars are suitable for hanging lights. You can attach the equipment either directly to the roof bars or by using the provided hanging straps.



Fit the waterproof tray *Required part: 1x Waterproof tray*

Each Plug and Grow Tent contains a waterproof tray. It should be located inside of the bottom of the Grow Tent. The tray has a Velcro tape at each corner for attachment to the uprights. Attach them securely and smooth into place.



Congratulation!

Your Plug and Grow Tent is ready to use now.

Lighting and ventilation systems can be installed additional as your requirements.

